


组装说明


Assembly Instruction

单列式电动电视升降装置


Single Column Electric TV Lift
TV-1280 TV-1710 TV-2180 TV-2480B

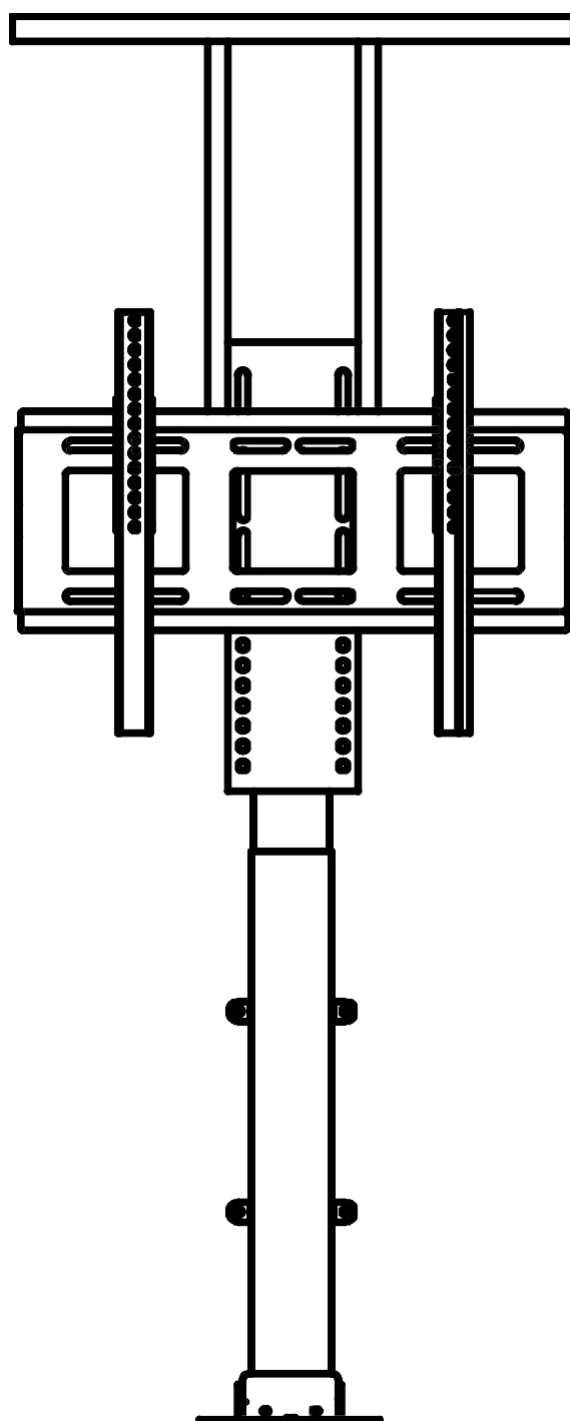

Component Parts

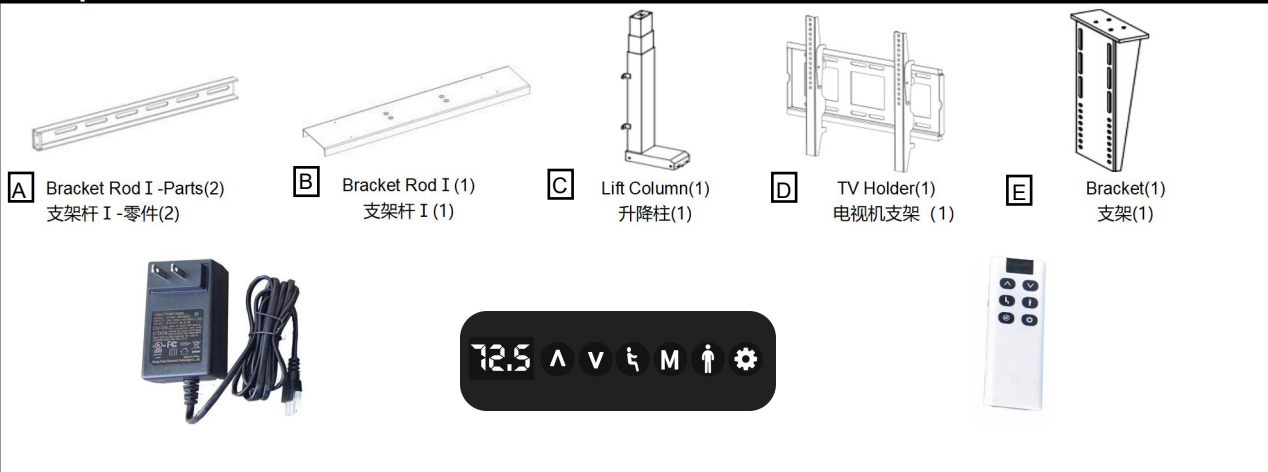


Screws List

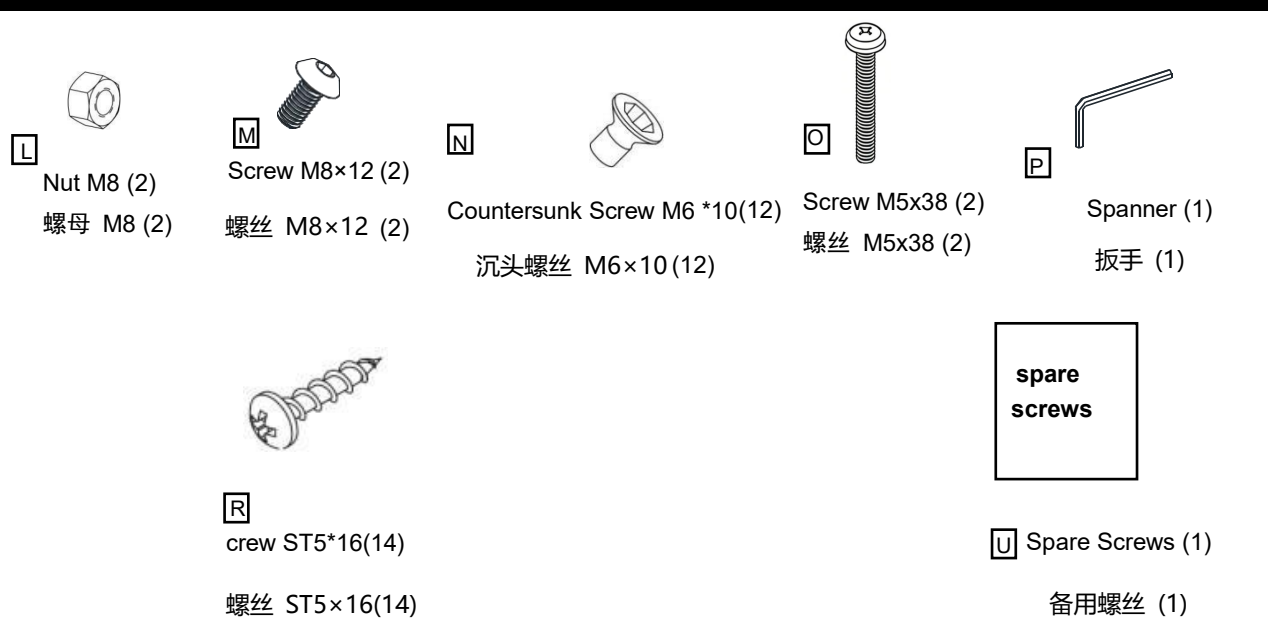


If it is a double column mobile support (TV-1710B, TV-2180B,TV-2480B), the number of screws used is doubled: **M** is 4, **L** is 4, **N** is 24, **R** is 28.

若是双柱移动支架（TV-1710B, TV-2180B,TV-2480B）时，其中螺丝使用的数量加倍：**M** 为 4、**L** 为4、**N** 为24、**R** 为28.


①

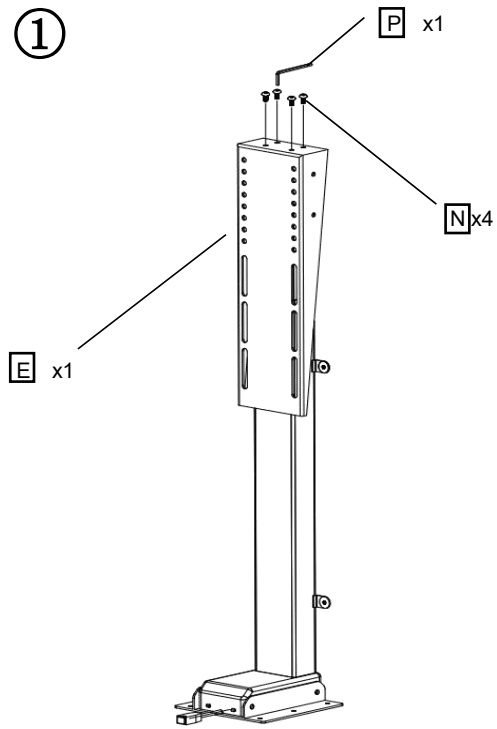


②

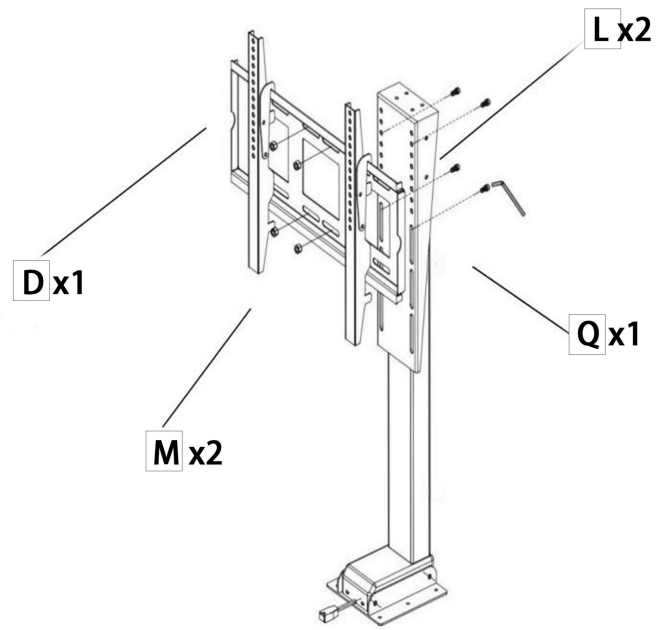

③

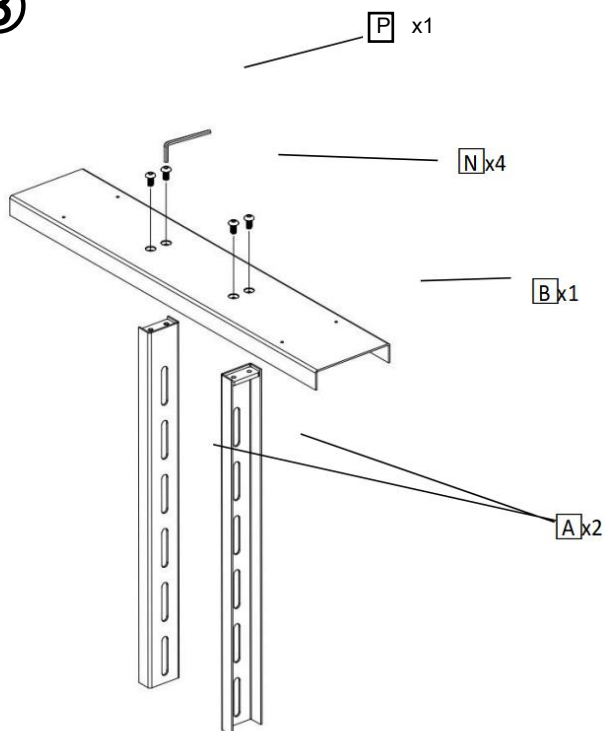

④

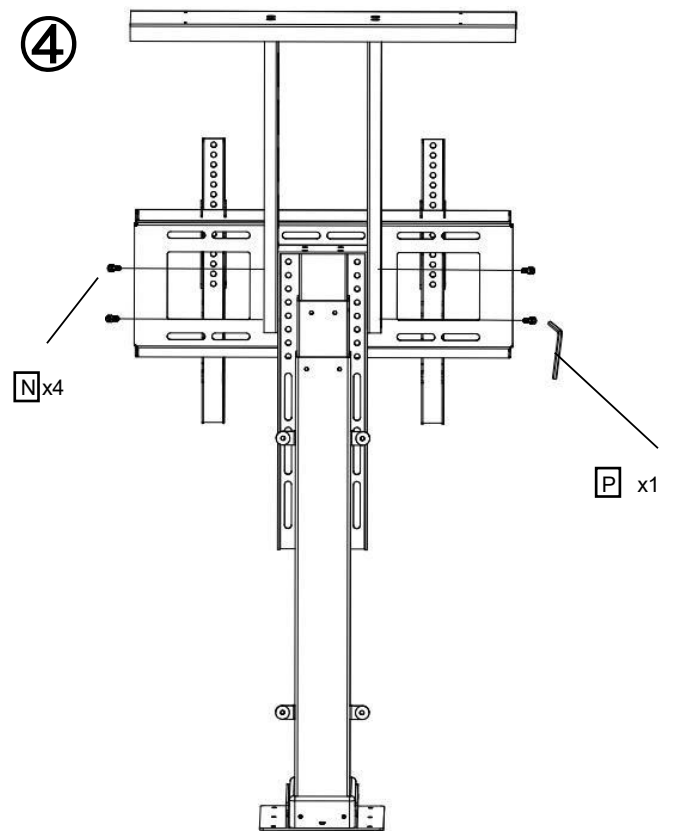

⑤

P x1

R x14

Installation (R):
Screw into the
wooden board of
the cabinet to fix
the bracket.

安装 (R): 拧进柜
子木板, 固定支
架。

Installation (O): When
the TV is mounted on
the shelf, it can be
tightened.

安装 (O): 当电视机机
上架时, 即可拧紧。

O x2


72.5 ^ v ~ M i ⚙

使用手册

Manual Instruction

1. 遥控器 (需配备电池: 12V 23A)

Remote Control (shall be with battery: 12V 23A)

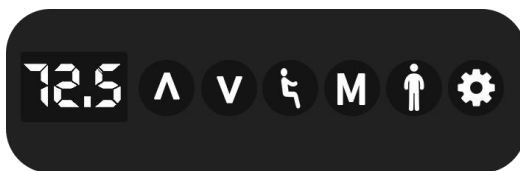

2. 遥控器匹配 (遥控器无响应或故障时进行操作):

Remote Control Code Pairing (Operate when remote is unresponsive or malfunctioning)

(1) 操作面板Control Panel Operation:

1) Press the Setting Key (Gear Icon) and "M" Key simultaneously. You will hear a "beep" sound and the screen display changes, entering the setup mode.

同时按键和“M”键，听到声响“滴”和屏幕变化后进入设置。

2) Press the Up Key (∧) to scroll to the number “F10”, then press the Setting Key (Gear Icon) to confirm.

按“∧”键，调到数字“F10”，再按键确认。

(2) 遥控器Remote Control Operation:

1) Press any button on the remote control. A "beep" tone indicates successful pairing.

按遥控器的任意键，听到声响“滴”，则配对成功。

(3) 操作面板Control Panel Operation:

1) Long press the Setting Key (Gear Icon) to store the configuration.

长按键，存储设置。

2) The device can be used normally.

该设备可正常使用。

3.重置操作: Reset Operation

Press the Setting Key (Gear Icon) and Down Key (∨) together to exit and return to the default standby state.

同时按键和“∨”键，回归初始状态。

4.立柱停止操作: Column Stop Operation

Remote Control: When the column during rising, you want to stop it, then you can press the button "∧", the column will stop to rise. And if necessary to stop the column during the descent, you can press the button "∨", it will stop to go down.

遥控器: 当立柱上升过程中，如需停止上升，可按下“∧”按钮，立柱将停止上升。如需在下降过程中停止下降，可按下“∨”按钮，立柱将停止下降。

5.基础高度的下限调整: Minimum Base Height Adjustment

(1) 操作面板Control Panel Operation:

1. Press the Setting Key (Gear Icon) and "M" Key at the same time. A "beep" sounds and the screen switches to setup interface.

同时按键和“M”键，“滴”声响，屏幕变化后进入设置。

2. Press the Up Key (∧) to select code “F06”, then press the Setting Key (Gear Icon) to confirm.

按“∧”键，调到数字“F06”，再按键确认。

3. If you need to raise the minimum height by 5 cm:

若下限要再高5公分:

Press the Up Key (∧) to adjust the value to 50, tap the Setting Key (Gear Icon) to confirm.

Finally, long press the Setting Key (Gear Icon) to save the setting.

则按“∧”键调到数字“50”，再按键确认，最后长按键，存储设置完成。

4. Press the Setting Key (Gear Icon[⚙]) and Down Key (V) together to exit and return to the default standby state.

同时按“[⚙]”键和“V”键，回归初始状态。

5. The device can be used normally.

该设备可正常使用。

6. 基础高度的上限调整：Maximum Base Height Adjustment

(1) 操作面板 Control Panel Operation:

1. Press the Setting Key (Gear Icon[⚙]) and “M” Key simultaneously. A "beep" prompt will play and the screen enters setup mode.

同时按“[⚙]”键和“M”键，“滴”声响，屏幕变化后进入设置。

2. Press the Up Key (Λ) to navigate to parameter “F02”, then press the Setting Key (Gear Icon[⚙]) to confirm.

按“Λ”键，调到数字“F02”，再按“[⚙]”键确认。

3. If you need to lower the maximum height by 10 cm:

若上限要再低10公分：

Adjust the hundreds digit down by 1 via the Down Key (V) (use the shift key to switch digit positions[↵]). Press the Setting Key (Gear Icon[⚙]) to confirm the value. Long press the Setting Key (Gear Icon[⚙]) to complete saving the limit setting.

则百位数（降1）按“V”键调数字（“[↵]”键轮换位数），再按“[⚙]”键确认，最后长按“[⚙]”键，存储设置完成。

4. The device can be used normally.

该设备可正常使用。

7. 操作系统保护: Operation System Protection

After the lift runs continuously for 3~4 times, control system will be in protection position. The handset shows “HOT”, meanwhile, the remote control and handset will be invalid. 18mins later, automatically connect or directly power off. (power off refers to indicator light of adapter goes out)

电梯连续运行3~4次后，控制系统将进入保护状态。遥控器显示“HOT”，同时遥控器和遥控器将失效。18分钟后，自动连接或直接断电。（断电指适配器指示灯熄灭）

注意 Precautions:

1) The product shall be used in accordance with the technical parameters;

本产品应按照技术参数使用；

2) Keep away from corrosive gas and dusty environment, pay attention to waterproof.

远离腐蚀性气体和多尘环境，注意防水。




The TV Lift can work normally after doing RESET operation when handset show “RST” .

执行重置操作后，当遥控器显示“RST”时，电视升降功能即可正常工作。


安装说明

Instruction for installation


型号 Model No: TV-1710B TV-2180B TV-2480B

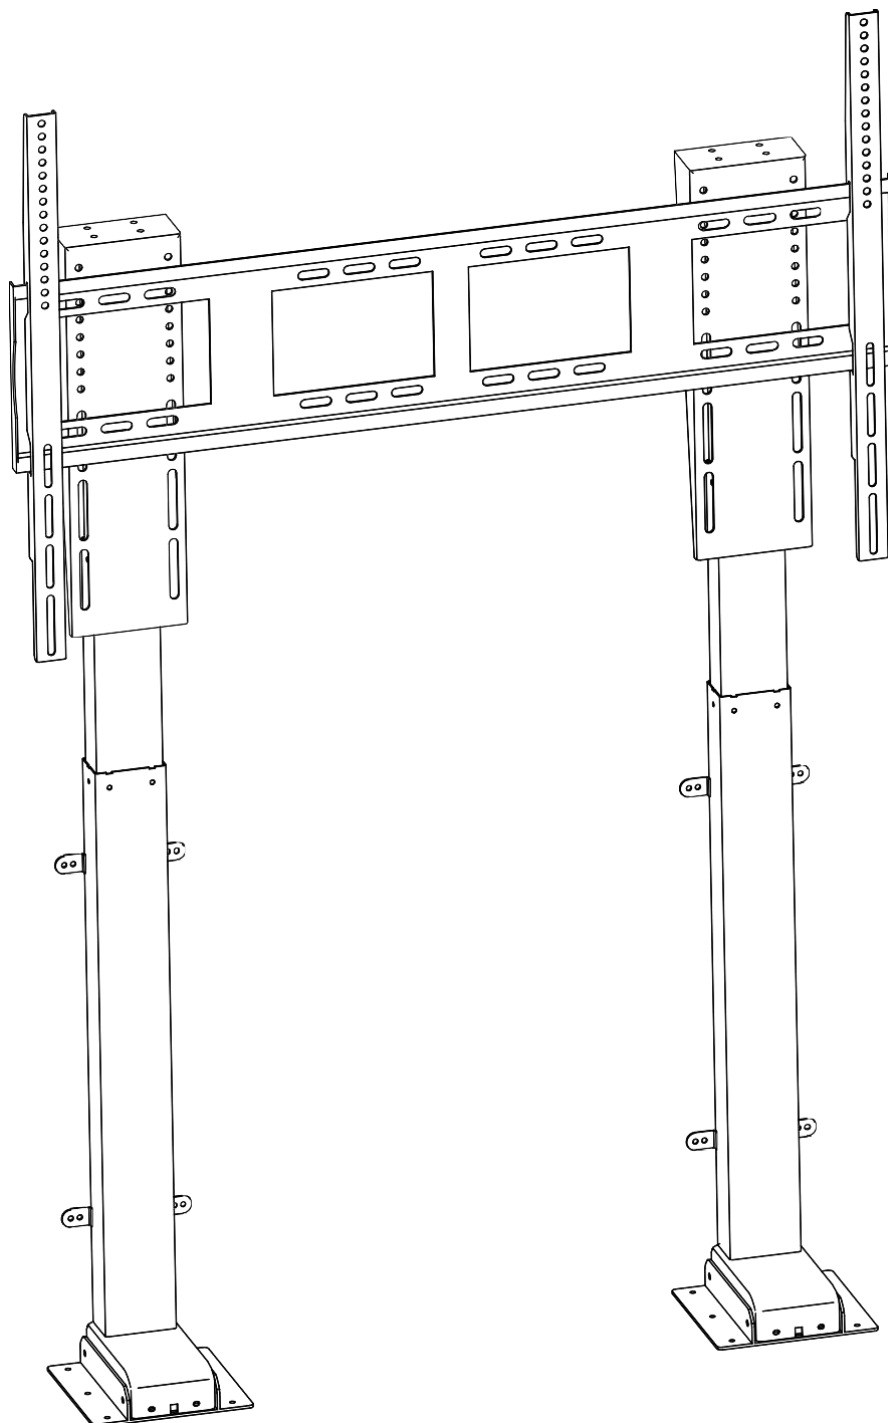


型号Model No: TV-1280

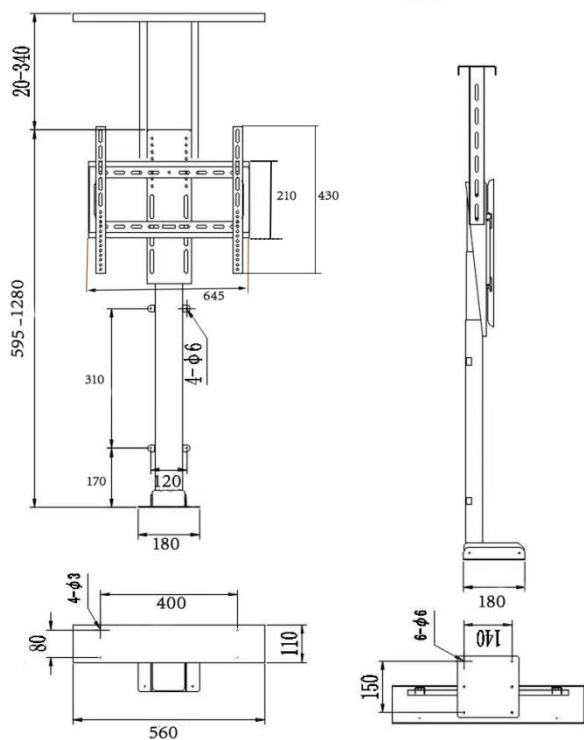

型号Model No: TV-1710

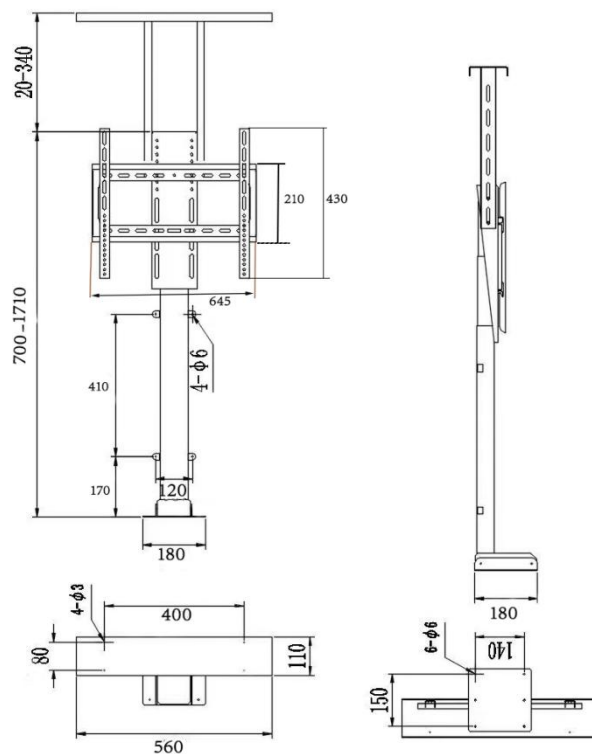

型号Model No: TV-2180

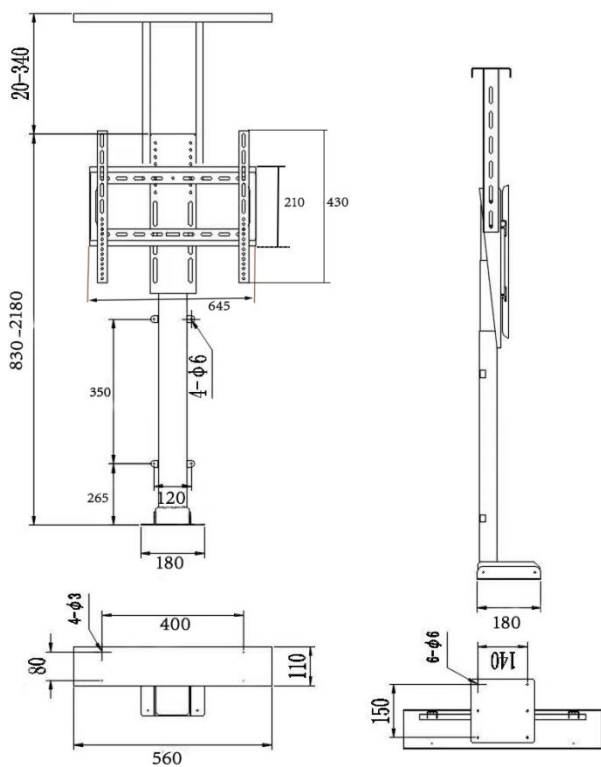

型号Model No: TV-2480B

